

2000 SERIES PLEATED BLIND



Operating and maintenance information

OPERATING INSTRUCTIONS

InterLace 2000 Series Pleated Blinds are sturdy systems that are functional and easy to operate in any of the control options.

Manual Hand Operation Pleated Blinds

To open and close a manual pleated blind, hold the operating handle and gently pull the blind vertically up or down as desired. These instructions also apply to manual tensioned pleated blinds and skylight blinds. For high level or skylight blinds, a control rod can be attached to the operating handle to assist.

Standard Cord Operation Pleated Blinds

To raise the blind, pull the cord vertically downwards, release the cord when the blind has reached the desired position and the cord lock will hold the blind in position. To lower the blind pull the cord to the middle of the blind (there will be a click when the cord lock is released), lower the blind to the required drop and return the cord to the vertical position to engage the lock.

Crank Operation Pleated Blinds

Attach the crank handle to the crank gear box located on the blind. Holding the sleeved section of the handle in one hand, gently crank the handle to rotate the blind mechanism and open or close the blind. These instructions also apply to tensioned pleated blinds and skylight blinds.

Electric Motorised Operation Pleated Blinds

Using the switch provided, utilise the raise and lower buttons to raise or lower the blind in the required direction to the desired stop position.



IMPORTANT: Please note that windows must never be left open behind blinds which are closed, as damage will occur. This damage is not covered by the product warranty.

MAINTENANCE

InterLace® 2000 Series Pleated Blinds are designed to be maintenance free.

Fabric Care

All fabrics are manufactured with an antistatic finish and are therefore more resistant to dust and dirt. The product should be cleaned with care, using a soft brush or dusting cloth. Attach a special soft dusting brush when using a vacuum cleaner to remove dust.

Skylight blinds should be regularly inspected for dead flies or insects, and these should be removed immediately to avoid any staining of fabrics.

Lubrication

If operation becomes slow or stiff, a small amount of InterLace® approved lubricant can ease the running of certain components as systems begin to age.

***Note:** Please be aware that although designed for intensive use, blinds are by nature delicate items and should be treated with respect. If at any point a mechanism becomes jammed or will not operate for any reason, contact InterLace® on 0800 619 6999 for advice. Do not ever force as this will potentially result in further damage. InterLace® state that an annual check should be carried out by a competent person, to ensure that the blinds operate in the correct way, that the fabric is undamaged and ensure that any parts requiring replacement are fitted as soon as possible. Spare parts of replaceable components and an approved lubricant are available from InterLace® on 0800 619 6999.*



SUSTAINABILITY & RECYCLING

InterLace® works hard to reduce the environmental impact of its activities, and we regularly evaluate the lifecycle perspective of every product. This means that where possible, we reuse parts and recycle materials to reduce waste going to landfill. When disposing of your InterLace® product, please break the system down into the various materials and recycle through the correct channels. If you require any information regarding recycling, please contact InterLace® with details of the project and product and we will be glad to advise.

InterLace® Warranty

InterLace® products are covered against defective manufacturing for 12 months from the date of installation.

This warranty does not cover misuse, builders damage after installation, or vandalism.

InterLace® liability is limited to the replacement of defective products like for like only.

InterLace® reserves the right to use discretion in the consideration of individual claims and the company's verdict is final.



INTERLACE
EST. 1976

InterLace® is committed to a continuing program of product improvement. Thus, please be advised that specifications, performance, appearance, and dimensions of InterLace® products are subject to change without notice.

InterLace® Blinds Ltd, Unit 6 The Grip Industrial Estate, Linton, Cambridge CB21 4XN
T: 0800 619 6999 | sales@interlaceblinds.com | www.interlaceblinds.com