

4000 / 4100 / 4200 SERIES BLACKOUT BLIND



Operating and maintenance information

OPERATING INSTRUCTIONS

InterLace® 4000 Series Blackout Blinds are robust systems that are smooth and easy to operate in any of the control options. These instructions also apply to the InterLace® 4100 Series and InterLace® 4200 Series.

Side Chain Operation Blackout Blinds

The blind is operated by means of the chain positioned at the side of the blind. Gently pull on the chain to roll the blind in the desired direction.

When lowering the blind, stop when the blind reaches the window sill and do not roll out to the full extent of the fabric as it could result in the fabric rewinding in the wrong direction, becoming creased or detached from the barrel. When raising the blind, do not continue to pull the chain once the hembar has reached the top as this can jam the mechanism requiring advice how to correct, or potentially causing damage.

Crank Operation Blackout Blinds

Take the rigid handle and fold the bottom part to form a handle. Holding the sleeved section of the bar in one hand, gently crank the handle to rotate the blind mechanism and raise or lower the blind to the parameters as detailed above.

Electric Motorised Operation Blackout Blinds

Using the switch provided, use the raise and lower buttons in the correct direction to open and close the blind to the desired position.



SUSTAINABILITY & RECYCLING

InterLace® works hard to reduce the environmental impact of its activities, and we regularly evaluate the lifecycle perspective of every product. This means that where possible, we reuse parts and recycle materials to reduce waste going to landfill. When disposing of your InterLace® product, please break the system down into the various materials and recycle through the correct channels. If you require any information regarding recycling, please contact InterLace® with details of the project and product and we will be glad to advise.



IMPORTANT: Please note that windows must never be left open behind blinds which are closed, as damage will occur. This damage is not covered by the product warranty.

MAINTENANCE

InterLace® 4000 Series Blackout Blinds are designed to be maintenance free. These instructions also apply to the InterLace® 4100 Series and InterLace® 4200 Series.

Fabric Care

Where fabric is soiled, contact InterLace® for specific cleaning instructions. Dust can be vacuumed, taking care, from the fabric surface.

Lubrication

If operation becomes slow or stiff, a small amount of InterLace® approved lubricant can ease the running of certain components as systems begin to age.

Note: Please be aware that although designed for intensive use, blinds are by nature delicate items and should be treated with respect. If at any point a mechanism becomes jammed or will not operate for any reason, contact InterLace® on **0800 619 6999** for advice. Do not ever force as this will potentially result in further damage.

InterLace® state that an annual check should be carried out by a competent person, to ensure that the blinds operate in the correct way, that any fabric is undamaged and ensure that any parts requiring replacement are fitted as soon as possible. Spare parts of replaceable components and an approved lubricant are available from InterLace® on **0800 619 6999**.

InterLace® Warranty

InterLace® products are covered against defective manufacturing for 12 months from the date of installation.

This warranty does not cover misuse, builders damage after installation, or vandalism.

InterLace® liability is limited to the replacement of defective products like for like only.

InterLace® reserves the right to use discretion in the consideration of individual claims and the company's verdict is final.



INTERLACE
EST. 1976

InterLace® is committed to a continuing program of product improvement. Thus, please be advised that specifications, performance, appearance, and dimensions of InterLace® products are subject to change without notice.

InterLace® Blinds Ltd, Unit 6 The Grip Industrial Estate, Linton, Cambridge CB21 4XN
T: 0800 619 6999 | sales@interlaceblinds.com | www.interlaceblinds.com