

5000 SERIES VENETIAN BLIND



Operating and maintenance information

OPERATING INSTRUCTIONS

InterLace® 5000 Series Venetian Blinds are sturdy systems that are functional and easy to operate in any of the control options.

Standard Cord and Wand Operation Venetian Blinds

The blind is raised and lowered by means of the cords positioned towards the end of the blind. Gently pull on the cords to raise the blind to the desired point. To retain the blind in this position, pull the cords slightly to the right and release to secure them in the cordlock. To lower the blind, move the cords to the left and allow the blind to lower under gravity to the desired point where it can be locked again. To tilt the slats when the blind is lowered, twist the control wand to the desired angle of louver.

Mono Endless Chain Operation Venetian Blinds

The endless cord loop is used to raise, lower and tilt the slats. Simply pull on one side of the loop to tilt the slats to the desired angle. Continue pulling on the cord to raise or lower the blind.

Crank Operation Venetian Blinds

Take the rigid handle and fold the bottom part to form a handle. Holding the sleeved section of the bar in one hand, gently crank the handle to rotate the blind mechanism.

Electric Motorised Operation Venetian Blinds

Using the switch provided, utilise the control buttons to raise or lower the blind to the desired position. To tilt the slats, press button and hold until desired slat angle is reached.



SUSTAINABILITY & RECYCLING

InterLace® works hard to reduce the environmental impact of its activities, and we regularly evaluate the lifecycle perspective of every product. This means that where possible, we reuse parts and recycle materials to reduce waste going to landfill. When disposing of your InterLace® product, please break the system down into the various materials and recycle through the correct channels. If you require any information regarding recycling, please contact InterLace® with details of the project and product and we will be glad to advise.



IMPORTANT: Please note that windows must never be left open behind blinds which are closed, as damage will occur. This damage is not covered by the product warranty.

MAINTENANCE

InterLace® 5000 Series Venetian Blinds are designed to be maintenance free.

Slat Care

Light soiling can be removed from aluminium slats with a damp cloth. Before applying pressure to the slat it must be supported underneath to prevent creasing. Please note that once an aluminium slat becomes creased, it cannot be repaired and should be replaced. Dust should be regularly vacuumed off the slats.

Lubrication

If operation becomes slow or stiff, a small amount of InterLace® approved lubricant can ease the running of certain components as systems begin to age.

Note: Please be aware that although designed for intensive use, blinds are by nature delicate items and should be treated with respect. If at any point a mechanism becomes jammed or will not operate for any reason, contact InterLace® on **0800 619 6999** for advice. Do not ever force as this will potentially result in further damage. InterLace® state that an annual check should be carried out by a competent person, to ensure that the blinds operate in the correct way, that the aluminium louvres are undamaged and ensure that any parts requiring replacement are fitted as soon as possible. Spare parts of replaceable components and an approved lubricant are available from InterLace® on **0800 619 6999**.

InterLace® Warranty

InterLace® products are covered against defective manufacturing for 12 months from the date of installation.

This warranty does not cover misuse, builders damage after installation, or vandalism.

InterLace® liability is limited to the replacement of defective products like for like only.

InterLace® reserves the right to use discretion in the consideration of individual claims and the company's verdict is final.



INTERLACE
EST. 1976

InterLace® is committed to a continuing program of product improvement. Thus, please be advised that specifications, performance, appearance, and dimensions of InterLace® products are subject to change without notice.

InterLace® Blinds Ltd, Unit 6 The Grip Industrial Estate, Linton, Cambridge CB21 4XN
T: 0800 619 6999 | sales@interlaceblinds.com | www.interlaceblinds.com